


## Getting Started

# Phone Overview

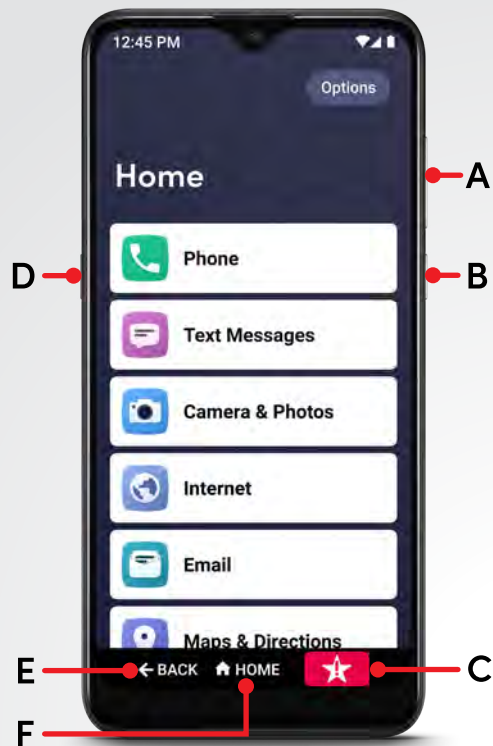

- A. **Volume Button**- PRESS upper end of the button to increase volume; PRESS lower end of the button to decrease volume.
- B. **Power/Lock Button**- QUICKLY PRESS to lock or wake your phone; PRESS AND HOLD to power your phone on or off.
- C. **Urgent Response Button**- PRESS AND HOLD to get help in an unsafe or uncertain situation (requires a Lively™ Health & Safety Package).
- D. **Google Assistant Button**- PRESS to verbally ask questions, get information, and more.
- E. **BACK Button**- TAP to return to the previous screen.
- F. **HOME Button**- TAP to return to the Home screen.