


The Jitterbug® Flip2 is even easier!

Improved features make the Jitterbug Flip2 your easiest phone yet. Reference your user guide and visit lively.com/support to learn more.

Better navigation

YES/NO buttons are now Back/Ok. “Back” takes you one step back, and “Ok” confirms a selection. Four-way directional keys replace previous up/down arrows.

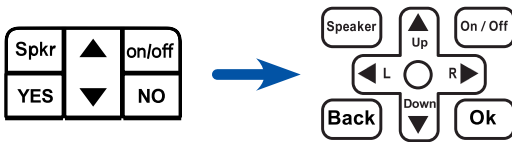

New Urgent Response button design

Connects you to certified Agents who are here for you, 24/7.



Amazon Alexa

Makes it fast and easy to call, text, check the weather, get info, and more, using your voice. See videos at

lively.com/fliplearn





Quick Text

Select predicted words for easy texting.

Great everyday tools

Navigate to Help Tools from the Main Menu to use the flashlight, calculator and FM radio.

Improved Contacts features

You can sort contacts by first/last name, store addresses and save multiple phone numbers for a contact. Access your Phone Book in “Contacts” from the Main Menu.

Improved photos and videos

Take videos and high quality photos with the 8MP main camera with auto-focus and zoom. Send selfies you take with the 5MP front-facing lens.

See your user guide for instructions on using all your great new features. View the user guide and additional learning resources at lively.com/support.

Urgent Response or 911 calls can be made only when cellular service is available. Urgent Response tracks an approx. location of device when device is turned on and connected to the network. Lively does not guarantee an exact location. Not all Health & Safety Services are available on all plans. See plans for details. By enabling Alexa on the Jitterbug Flip2, you acknowledge that Lively is not responsible for Amazon Alexa's functionality or services. Other marks are property of their respective owners and may be trademarks. Lively and Jitterbug are trademarks of Best Buy Health, Inc. ©2023 Best Buy. All rights reserved.