


getting started

# Phone Overview

Important buttons on your Jitterbug Smart

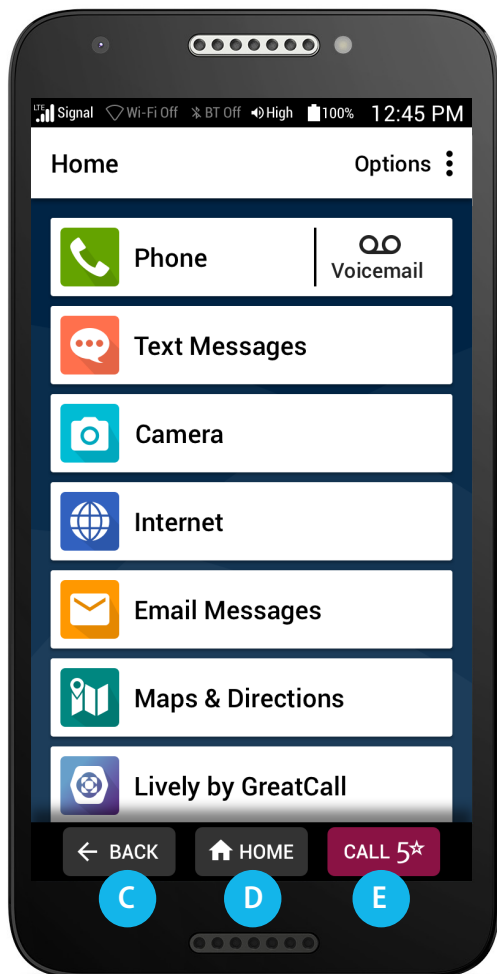

**A) Volume Button:** PRESS upper end of button to increase volume, PRESS the lower end to decrease volume

**B) Power/Lock Button:** PRESS and release to lock your phone, HOLD DOWN to power your phone on or off

**C) Back Button:** TAP to return to the previous screen

**D) Home Button:** TAP to return to the home screen

**E) 5Star Button:** PRESS and HOLD to get help in any unsafe or uncertain situation (requires Health & Safety package)

**IMPORTANT:** Locking your phone will help increase battery life and prevent accidental calls.