


Getting Started

Phone Overview

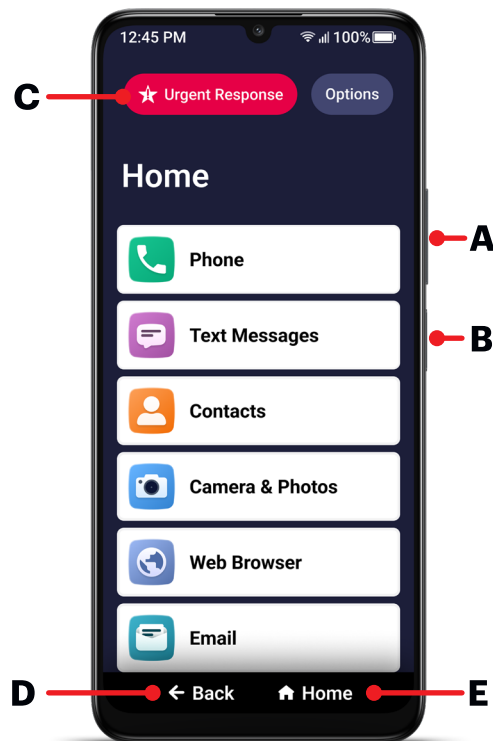

A. Volume Button - PRESS upper end of the button to increase volume; PRESS lower end of the button to decrease volume.

B. Power/Lock Button - QUICKLY PRESS to lock or wake your phone; PRESS AND HOLD to power your phone on or off.

C. Urgent Response Button - PRESS AND HOLD to get help in an unsafe or uncertain situation (requires a Preferred or Premium plan).

D. BACK Button - TAP to return to the previous screen.

E. HOME Button - TAP to return to the Home screen.